


Bulker Bag Stand

Safe work instruction

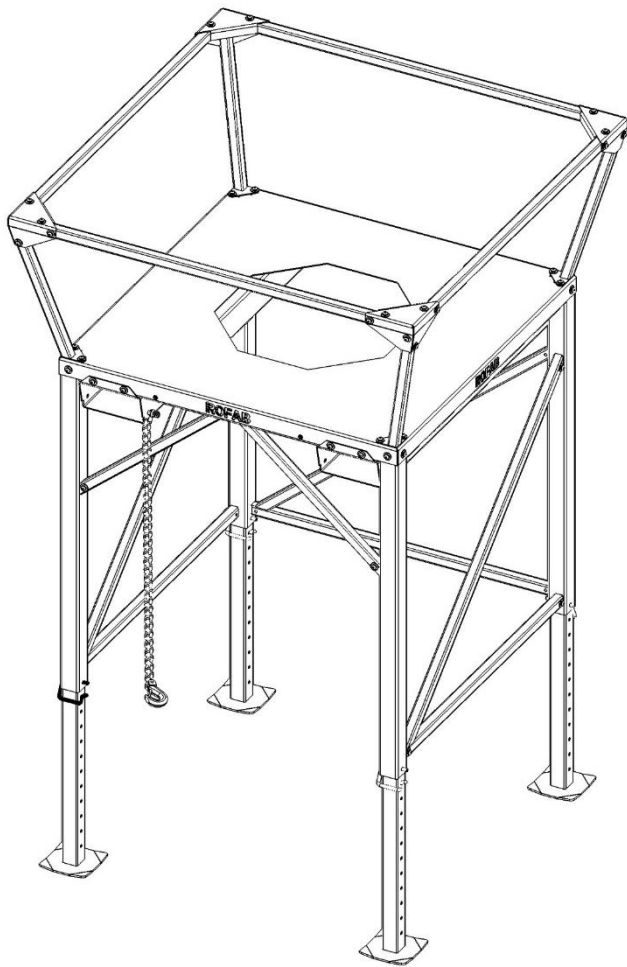

Specification:

- Working Load Limit: 1000kg.
- To be used on hard flat ground with bearing pressure $>312.51\text{kPa}$.

Use:

Before each use check;

- for any cracking or deformation of members.
- the extendable legs are secured through both inner and outer holes.

While being transported the stand is to be secured with the chain to the industrial lift truck.

Not to be used in strong gale winds (See Beaufort Wind Scale).

The platform does not contain adequate load restraints to be moved while loaded.

The guide rails are to assist central loading of the bag on the platform.

Maintenance:

This stand is to undergo minimum annual inspection by a competent person to ensure suitability for continued safe service.

Any indication of critical flaws or risks to continued service (damage, wear, corrosion...) shall be further investigated and made good before returning to service.