




Bulker Bag Platform Assembly Manual

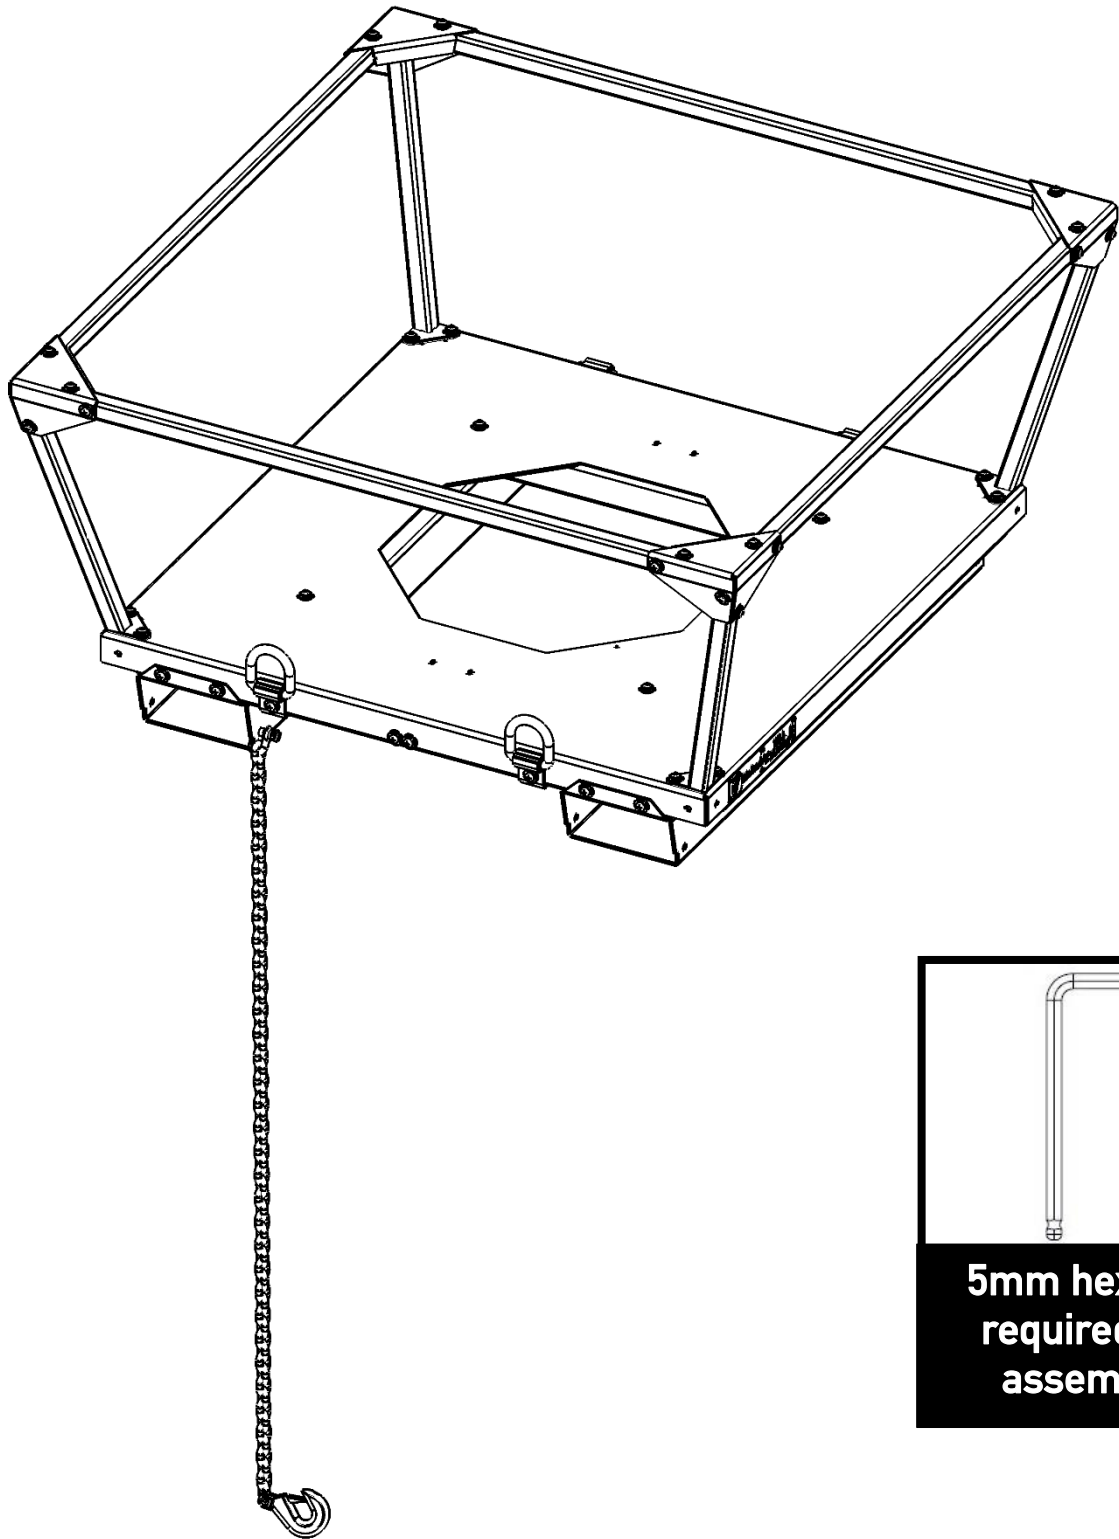


5mm hex key
required for
assembly

Step1.

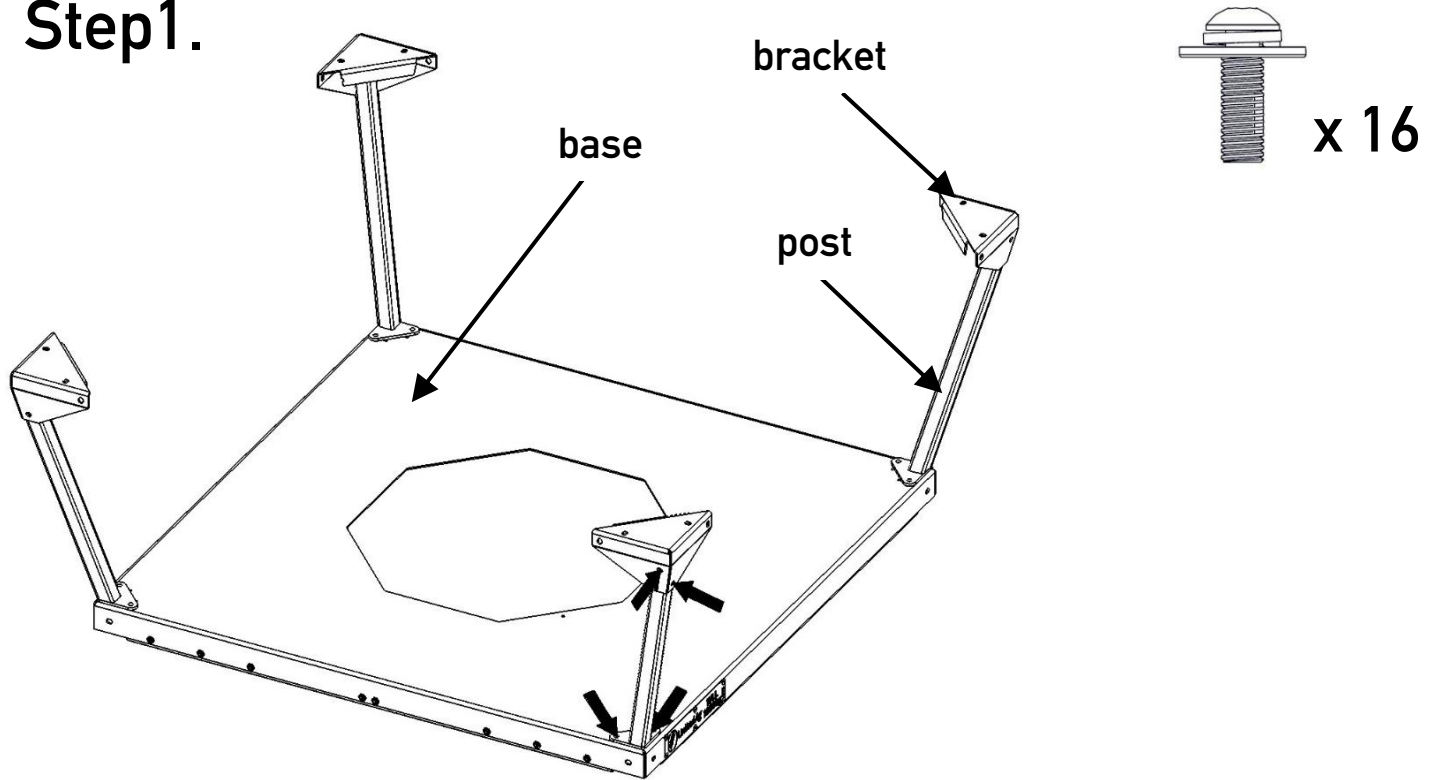



Loosely bolt the posts to base and the bracket to the top of the post.

Step2.

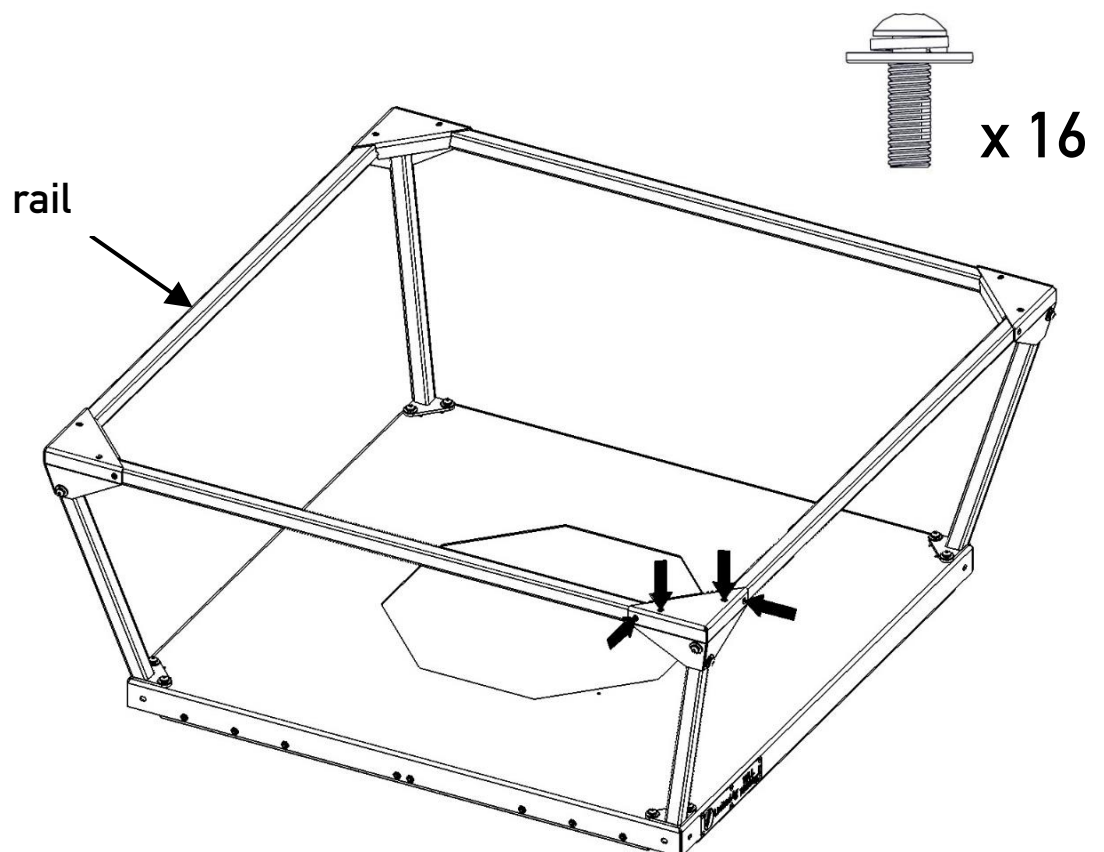

Bolt rails to the brackets and tighten all bolts.


Step3.

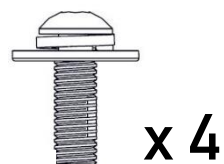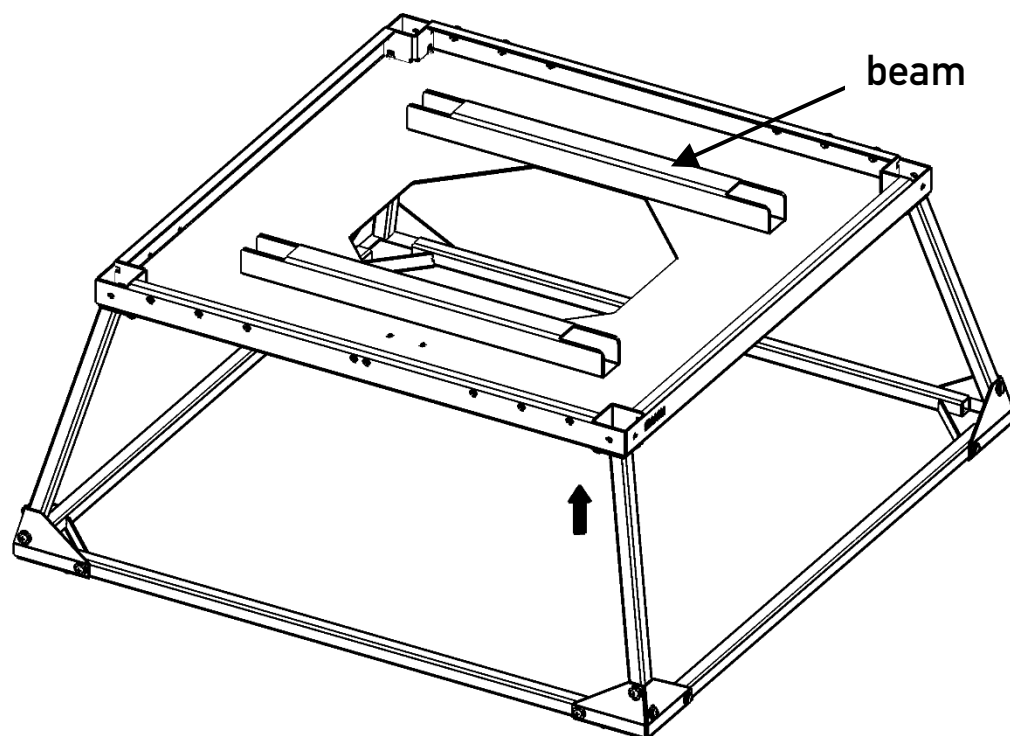

x 4

Bolt the beams to the base.

Step4.

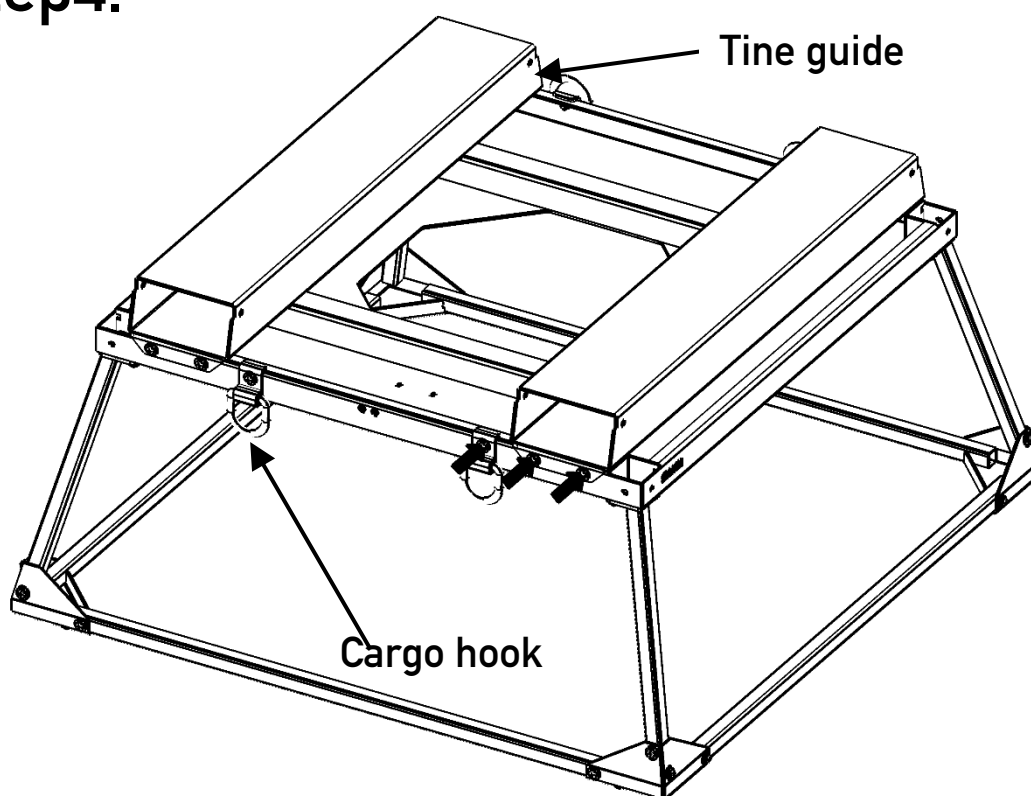


x 12

Bolt tine guides on at the desired width.

Bolt cargo hooks in remaining locations.

Step5.

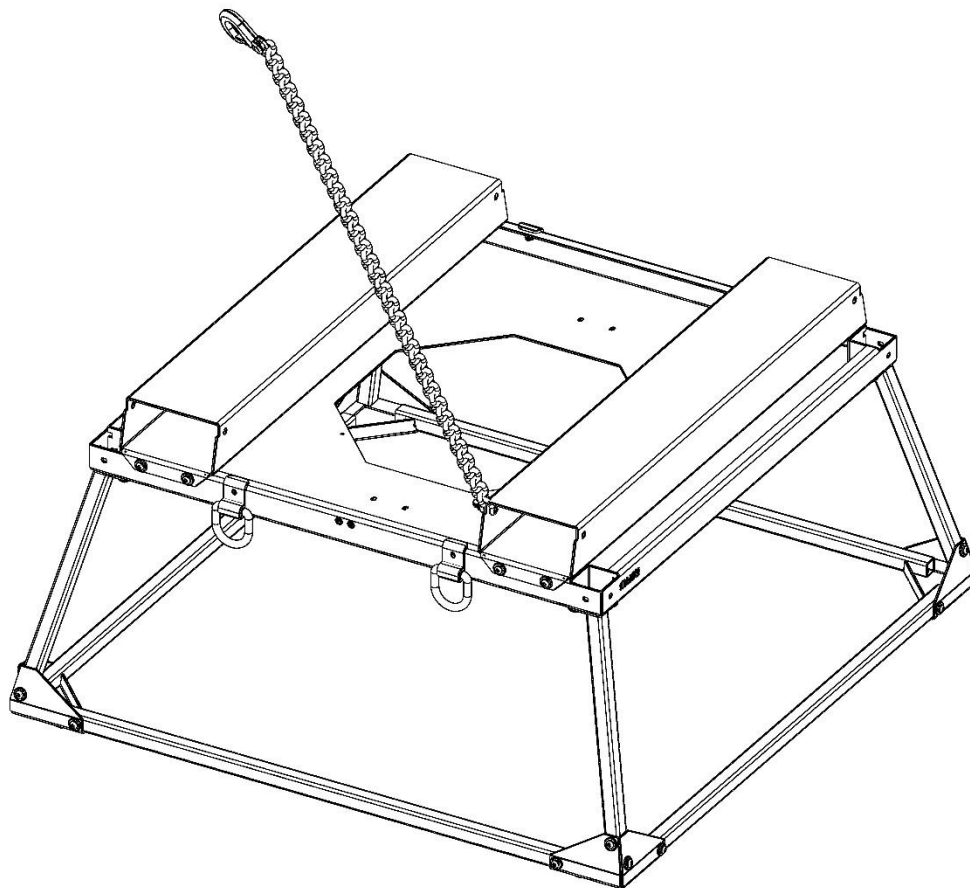

Attach chain to tine guide in suitable location for ease of attachment to lift truck.